




		BASE MOUNTING TO BACK BOX CHART					
BASE / ADAPTOR (min to max fixing centres)		4" (102MM) RECTANGULAR (82.5mm fixing centres)	SMALL OCTAGONAL (Ø87MM) (70mm fixing centres)	LARGE OCTAGONAL 3.5" (Ø102MM) (90mm fixing centres)	4" (102MM) SQUARE (142mm diagonal) (120mm fixing centres)		
	A4098-5261 4" Base (Ø 109mm) (50 to 70mm)	No	Yes	No	No		
	A4098-5207 5" Base (Ø 125mm) (50 to 88mm) <i>* increased to 90mm on latest design</i>	Yes	Yes	Yes*	No		
	4098-9799 5" to 6" adaptor (Ø 160mm) (50 to 130mm) used with A4098-5207	Yes	Yes	Yes	Yes		
	A4098-5210 (Eaton) Sounder Base (Ø 109mm) (50 to 70mm), requires use of existing adapter plate as a sound reflector (see below)	No	Yes	No	No		
	4098-5227 new 5" adaptor plate (50 to 90mm) used with A4098-5210	Yes	Yes	Yes	No		
	4098-5228 new 6" adaptor plate (50 to 130mm) used with A4098-5210	Yes	Yes	Yes	Yes		


See next slide for visual examples of base/plate combinations.



A4098-5207 5" Base
mounted on 4098-9799
6" adaptor plate.

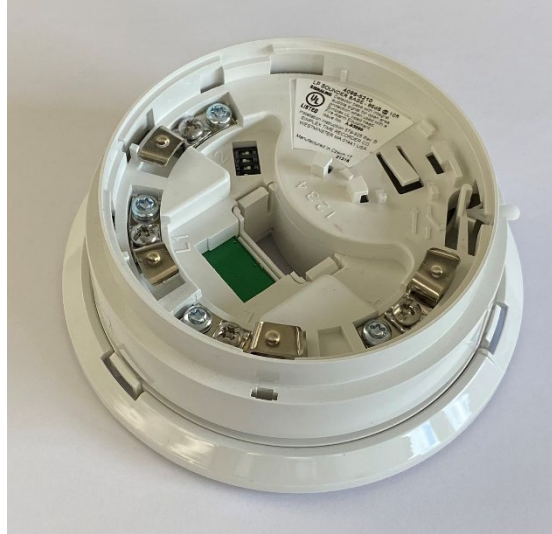

A4098-5210 Sounder Base
mounted on 4098-5227
5" adaptor plate.

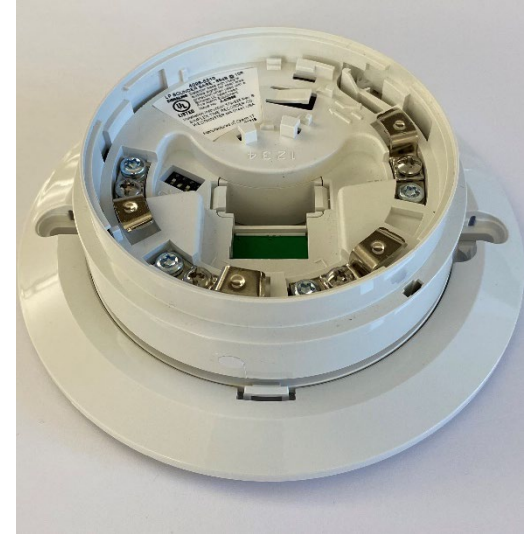

A4098-5210 Sounder Base
mounted on 4098-5228
6" adaptor plate.