

## Features

### Monitors compatible 4-20 mA output sensors:

- Interface linear analog sensor data to Autocall fire detection panel models 4007ES, 4010ES, and 4100ES using IDNet communications, and 4100ES using IDNet communications
- Refer to special note below for additional important information

### Fire detection panel monitoring and annunciation:

- Up to three threshold levels, each with custom action message
- Display and archive actual sensor analog levels
- Allows sensor calibration date recording
- Requires a single address (two IDNet unit loads)
- Up to 100 custom AMZ point types are available per panel or per connected Network

### AMZ module features:

- Automatic and manual AMZ self-test
- On-board manual test switch provides WALKTEST system test feature
- Resettable sensor power output
- Supervised sensor trouble input
- Local LED alarm annunciator output
- Mounts in 4" (102 mm) square electrical box with extension

## Introduction

**Analog Monitor ZAMs (AMZs)** provide an accurate, multi-featured interface for connecting analog sensors to compatible Autocall addressable fire detection panels. The panel monitors the sensor and annunciates whenever a selected threshold level or trouble condition is observed. Typical applications include: air quality for demand control ventilation, air and liquid temperature, humidity, and air velocity (see Table 3).

### Note:

Compatible sensors are typically supplied by non-Autocall manufacturers and/or distributors. Autocall DISCLAIMS ALL EXPRESS WARRANTIES NOR IS IT RESPONSIBLE FOR ANY SERVICE, TESTING AND/ OR INSPECTION OF THE COMPATIBLE SENSORS. Autocall DISCLAIMS ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE REGARDING THE COMPATIBLE SENSORS.

## Important Application Considerations

1. The purpose of the AMZ is to communicate the status of a compatible 4-20 mA sensor to the Autocall fire detection panel for proper fire alarm system response including annunciation and event logging.
2. **Responses required to be initiated by the sensor for fire and life safety actions are to be initiated by sensor output contacts** (refer to [Additional Application Reference](#)).
3. Autocall does not assume responsibility for the application, selection, inspection, warranty, calibration, or testing of the analog sensor.
4. AMZs and the connected panel are to be located outside of the monitored area and installed in accordance with applicable local code requirements.
5. The AMZ accommodates 2-wire, 3-wire, or 4-wire connections to a compatible sensor.

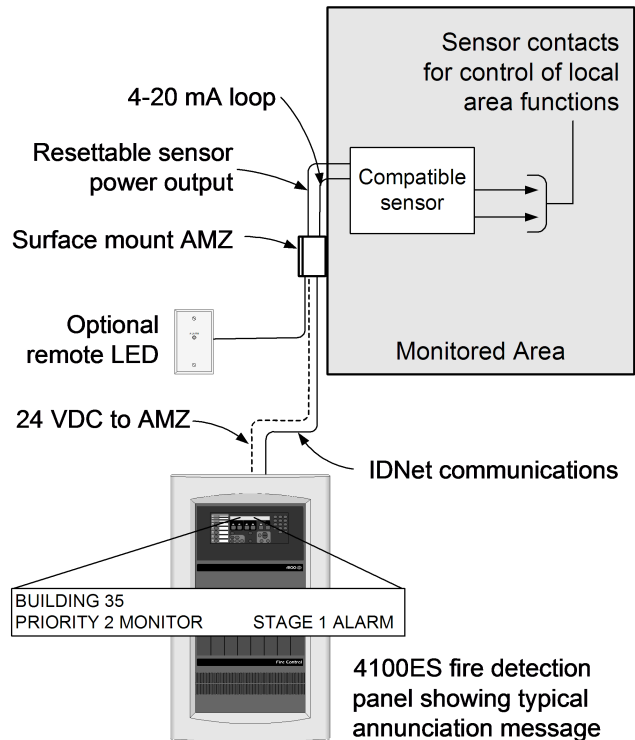


Figure 1: AMZ System Interface Example\*\*

\*\* Depicted sensor location is for illustration only. Refer to specific sensor requirements for proper location.

## AMZ Detection Panel Features

**Analog Data Access.** Real time analog sensor values can be accessed using the front panel interface. Data is formatted in the specific units being measured.

**Flexible Sensor Programming.** AMZ point types can be designated as Priority 2, Supervisory, Trouble, Latched Supervisory, or Utility, each with custom label. (For Fire and Life Safety monitoring, connect to sensor output contacts, refer to [Additional Application Reference](#).)

**Monitored Communications.** By default, the AMZ provides an "output abnormal" trouble if the monitored sensor produces an output below 4.0 mA or above 20.0 mA.

**Three Programmable Threshold Levels.** Each AMZ can have up to three separate threshold levels, each with a custom action message.

**Custom AMZ Point Types.** Up to 100 custom AMZ point types can be programmed into a single fire alarm detection panel. (For Network applications, the Network total custom AMZ point type limit is also 100 maximum.) Custom point types would be required for the same sensor type but with different threshold values, or for different sensors with unique characteristics.

**Calibration Date Recording.** Each sensor's calibration date can be manually entered for secured record keeping.

**Data Exporting.** Sensor activity pertaining to the three analog alarm threshold levels can be exported for archiving via the Autocall Network using a TrueSite Workstation or TrueSite Incident Commander.

\* Additional listings may be applicable; contact your local product supplier for the latest status.

## Compatible Sensor Operation

**Compatible sensors** provide a linear output current varying between 4.0 mA and 20.0 mA that represents the present analog measurement as predetermined by the specific sensor. The AMZ monitors the 4-20 mA loop connection and digitally communicates the sensor measurement to the panel. With this information, the panel can determine whether a status annunciation is required and can display the sensor analog level directly in the appropriate units of measurement.

**The 4-to-20 mA loop** is an established analog format that is highly reliable and inherently supervised for loop integrity. For additional monitoring, sensors with "dry" trouble contacts can be directly connected to the AMZ's supervised trouble input circuit.

## AMZ Product Selection Chart

**Table 1: AMZ Product Selection**

SKU	Mounting Type	Description	Connections
A190-9050	Surface mount	Remote AMZ package with cover; mounts in 4" (102 mm) square box with extension, see <a href="#">AMZ Remote Location Mounting Information</a>	Color Coded Wire Leads, 18 AWG (0.82 mm <sup>2</sup> )
A190-9051	Semi-flush		

**Table 2: Options**

SKU	Description	Mounting	Connections
A2098-9808	Remote LED indicator	Single gang stainless steel plate	18 AWG Leads

## AMZ Product Listings Compatibility Chart

**Table 3: Listings compatibility**

AMZ SKU	UL Listing	ULC Listing
A190-9050	Listed for use with:	Listed for use with compatible 4-20 mA sensors
A190-9051	Mine Safety Appliances Co. (MSA) model Chillgard RT Refrigerant Gas Monitor	

## AMZ Specifications

**Table 4: Voltage and Current Specifications**

Specification	Details
Operating Voltage	18-32 VDC, 24 VDC nominal
Sensor Output	Switched input voltage
Sensor Current (3 or 4-wire devices)	400 mA maximum
Basic AMZ Current	30 mA
Sensor Loop Current	4 mA minimum, operation below 4.0 mA is a trouble condition 20 mA maximum, operation above 20.0 mA is a trouble condition
Trouble Circuit Output Current	5 mA for monitoring of dry trouble contacts, voltage supplied by the AMZ
A2098-9808 LED Annunciator	3 mA

**Table 5: General Specifications**

Specification	Details
Supervised Trouble Input	Dry contact, 29 VDC maximum
Wiring, Sensor Loop and Power	18 AWG twisted pair, or per sensor requirements
Communications	IDNet Communications
	One IDNet address per AMZ Requires two IDNet unit loads
Communications	IDNet
	Up to 100 custom AMZ point types per panel Up to 100 custom AMZ point types total per Network
Maximum distance, AMZ to sensor	3270 ft (1 km)
Temperature Range	Non-hazardous indoor locations, 32° F to 120° F (0° C to 49° C)
Humidity Range	10 to 90 % RH
Installation Instructions	574-704AC

## AMZ Current Requirements


Function	Current
Basic Operation	30 mA
Sensor Loop (20 mA maximum)	+ _____ mA

## IDNet Communicating Devices 4-20 mA Analog Monitor Zone Adapter Module (AMZ)

Function	Current
Sensor Power (400 mA maximum)	+ ____ mA
<b>Sub Total* =</b>	____ mA
<b>Options</b>	
A2098-9808 LED (3 mA in alarm)	+ ____ mA
Trouble (5 mA with trouble contact closed)	+ ____ mA
<b>Total* =</b>	____ mA

**Note:** \*Do not exceed 450 mA max.

### AMZ Remote Location Mounting Information

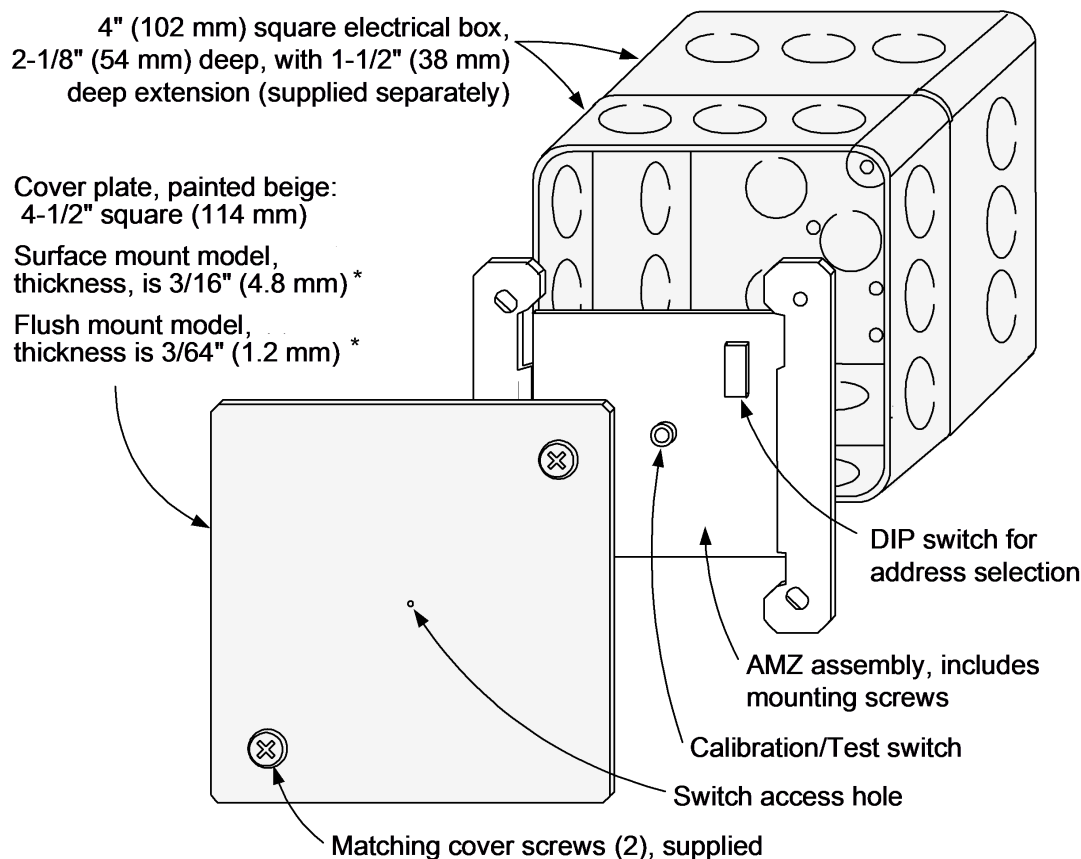


**Note:**

For additional information, refer to Installation Instructions 574-704AC.

\* Surface mount SKU A190-9050 and Flush mount SKU A190-9051 .

## Additional Application Reference

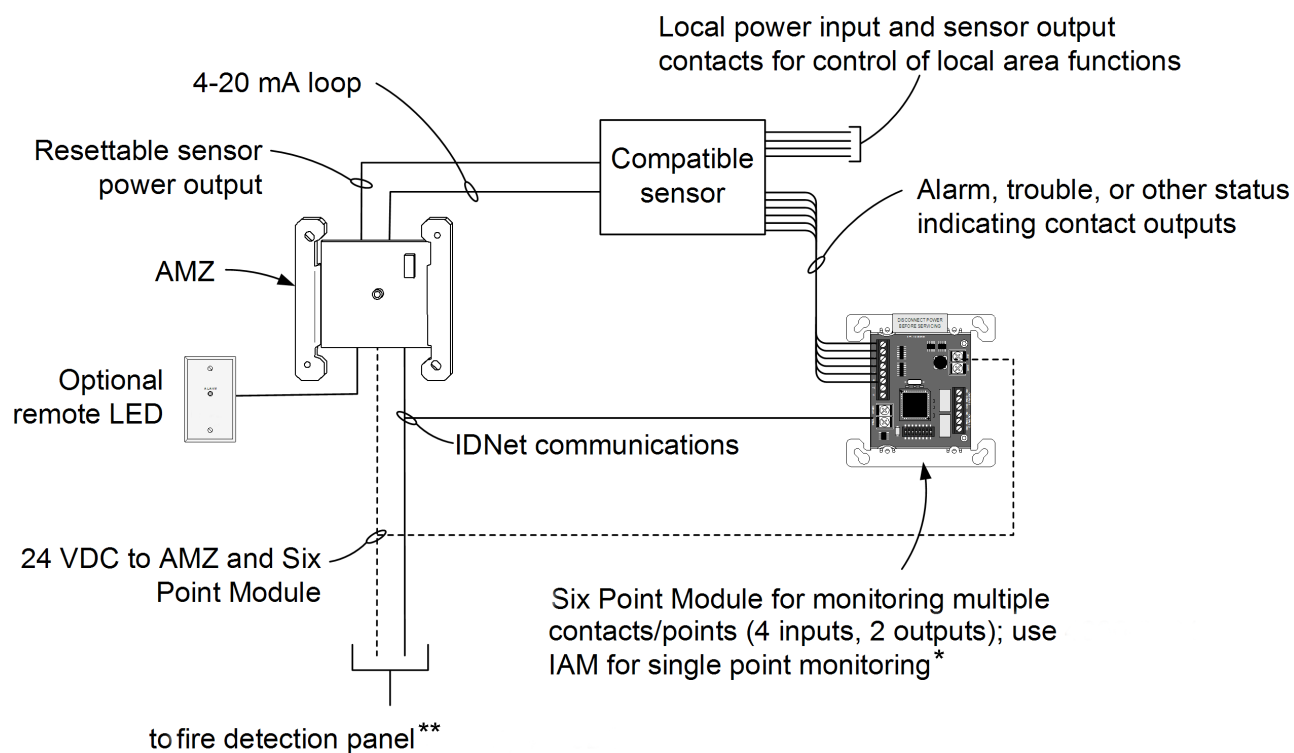

\*Six Point Module SKU: A4090-9120 and IAM SKU: A4090-9002.

\*\* Fire detection panel models 4007ES, 4010ES, or 4100ES.